
MOTORS AND CHASSIS



	PARTS	
- Motor Assemblies	X	4
- Chassis	X	1
- Bracket scr	X	4
- Bracket nuts	X	4
- 1/2in spacer	X	3
- 2in spacer	X	3
- 1in spacer	X	4
- 1/2in x 3/32in hex	X	3
- 1/2in x 5/32in scr	X	3
- 1/2in x 7/64in scr	x	4

ASSEMBLY

- Make sure the motors are oriented correctly with the encoders' connectors facing upwards through the chassis. The Bracket/Motor Assemblies are on the bottom of the chassis
- Fasten those Assemblies from the top(opposite side from Motors) of the chassis using the Bracket Screws and Nuts(included with the Motor Brackets)
- Fasten the 1in spacers to the top of the chassis with 1/2in x 7/64in screws.
- Screw in each 1/2in set screw into one 1/2in spacer with the keyed side going through the 1/2in spacer
- Screw that assembly into a 2in spacer
- Fasten those assemblies facing upwards on tothe chassis with 1/2in hex screws

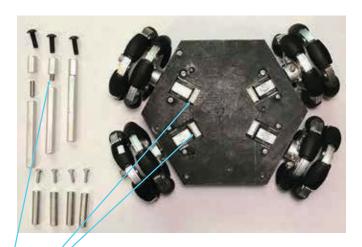